

RDVV Display-connection

Connector aansluiting RDVV voor de 300mWatt / 1 Watt / 8-Watters						
14p RDVV	20p / Pkbee	x	Omschrijving PIN	LCD PIN (omsch)	Tiptoetsen	LED
	1	-	Key (Not Connected)			
	2	-	GND			
	3	-	Loper			
	4	-	+12Volt			
1	5	-	RB3	14 (D7)		
2	6	-	RS	4()		
3	7	-	RB2	13(D6)		
4	8	-	"Down"		1	
5	9	-	RB1	12(D5)		
6	10	-	"SET"		1	
7	11	-	RB0	11(D4)		
8	12	-	"UP"		1	
9	13	-	R/W	5		
10	14	-	GND	1		
11	15	-	+5Volt	2	2	
12	16	-	Contrast	3		
13	17	-	E	6		
14	18	-	Anode (BackLight LED)	15		
	19	-	Clipper - NotUsed			
	20	-	LockLed			
			Kathode (BackLight LED)	16		Kathode
			Via resistor (390 Ohm) to +5Volt			Anode

Opmerkingen:

1) Bij installatie van de RDVV Display-Unit 2007V1/PKBee MOET de instelpotmeter van de stuurzender worden verwijderd. Indien dit niet gedaan wordt instaat er een kortsluiting. De BC557 kan hierdoor defect raken.



